New Pixel Bar 18x18W RGWAUV 6IN1 Led Bar Light

USER MANUAL



Please read the instructions carefully before use

TABLE OF CONTENTS

1.Safety Instructions	3-4
1.Technical Specifications	4
2.Control Menu	5
3.DMX Channels	6-9
4. Dimension	9
5. Trouble Shooting	10
6.Fixture Cleaning	10

STATEMENT

The product has well capability and intact packing when leave factory. All of the user should comply with warning item and manual, any misuse cause of the damages are not included in our guarantee, and also can not be responsible for any malfunction & problem owing to ignore the manual.

1.Safety Instructions

Please keep this User Guide for future consultation. If you sell the unit to another user, be sure that



they also receive this instruction booklet.

•Unpack and check carefully there is no transportation damage before using the unit.

•Before operating, ensure that the voltage and frequency of power supply match the power requirements of the unit.

•It's important to ground the yellow/green conductor to earth in order to avoid electric shock.

•The unit is for indoor use only. Use only in a dry location.

•The unit must be installed in a location with adequate ventilation, at least 50cm from adjacent surfaces. Be sure that no ventilation slots are blocked.

•Disconnect main power before replacement or servicing.

•Make sure there are no flammable materials close to the unit while operating as it is fire hazard.

•Use safety cable when fixes this unit. DO NOT handle the unit by taking its head only, but always by taking its base.

•Maximum ambient temperature is Ta: 40°C. DO NOT operate it where the temperature is higher than this Unit surface temperature may reach up to 85°C. DO NOT touch the housing bare-hand during its operation. Turn off the power and allow about 15 minutes for the unit to cool down before replacing or serving.

•the event of serious operating problem, stop using the unit immediately.Never try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
•DO NOT touch any wire during operation as high voltage might be causing electric shock.

Warning:

•To prevent or reduce the risk of electrical shock or fire, do not expose the unit to rain or moisture.

•The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.

Caution:

•There are no user serviceable parts inside the unit. DO NOT open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please contact your nearest dealer.

Installation:

•The unit should be mounted via its screw holes on the bracket. Always ensure that the unit is firmly fixed to avoid vibration and slipping while operating. And make sure that the structure to which you are attaching the unit is secure and is able to support a weight of 10 times of the unit's weight. Also always use a safety cable that can hold 12 times of the weight of the unit when installing the fixture.



•The equipment must be fixed by professionals. And it must be fixed at a place where is out of the touch of people.

4

2.Technical Specifications

Voltage:AC100~240V,50/60HZ Light source:18PCS 18W RGBWAUV 6in1 leds DMX Channel:12/110CH Dimmer: High resolution dimmer 0~100% Motorized 25° - 75° Zoom Operate: Setup and addressing via OLED display and 4 buttons Pixel Pitch: 52MM Filter: Quick release diffusion filter RDM: support Working temperature: -30° C~50° C Control mode:DMX512,Auto Run, Master/Slave, Sound active **RGBWAUV 8bit color mixing** Pattern effects with variable speed and fade time Strobe effect: Variable speed (1-20HZ) Horizontal hanging with Omega brackets Horizontal installation on the floor with tilt bracket fast locks Vertical installation on the floor with a base plate Hanging vertically "dropped" with a vertical adapter Split Joint: structural connection with 2 pieces quick release pins House : Aluminum, Black Data : XLR IN/OUT Power IN / OUT IP Grade: IP20 Gross Weight: 15.0 kg

4.Control Menu



MENU A Y ENTER

Display:

MENU To select the programming functions

DOWN To go backward in the selected functions

UP To go forward in the selected functions

ENTER To confirm the selected functions (**unlock screen**)

Operations:

Press "**MENU**" to unlock screen, then press "**Menu**" to select 7 different functions, Press the "**UP** or **DOWN**"keys to increase or decrease the value, Press "**ENTER**" to save and Exit.

Addr	A001-A512	512 Address Settings
CHad	12 H	12 channel settings
CHnd	110 H	110 channel settings
	Auto	Host self running mode
SLnd	Soun	Host self sound mode
	SL 1	Console mode
	SL 2	Auxiliary mode
SHnd	0-85	Host Self Running Effect Selection
Clor	1-32	Host color selection (effects 0-60)
Sped	0-100	Auto run speed adjustment
Sens	0-100	Sound sensitivity
R***	0-255	Red dimming
G***	0-255	Green dimming
B***	0-255	Blue dimming
W***	0-255	White dimming

Ω

4

DNIUNIJUNEKU	BRIGHTSUNPI	RO	
--------------	-------------	----	--

Y***	0-255	Yellow dimming
P***	0-255 Purple dimming	
LEd	OFF	The screen is off after 5 seconds
	ON	Screen always on

5.DMX Channels

12CH

Channel	Function	Description
1	Total brightness adjustment	0-255
2	Strobe	0-255
3	Red dimming/ Auto run color selection	0-255
4	Green dimming/ Auto run color selection	0-255
5	Blue dimming/ Auto run color selection	0-255
6	White dimming/ Auto run color selection	0-255
7	Yellow dimming/ Auto run color selection	0-255
8	Purple dimming/ Auto run color selection	0-255
9		0 no effect
		1-182 (effects 0-60) can choose
	Auto run effect	color as base color
		183-255 (effect 61-85) Multi-color
		self-walking (can not choose
		color as base color)
10	Auto run speed	0-255
11	No effect	0-6 no effect
	Auto run effect color mixing	7-255 color mixing combination
12	Color mixing dimming	0-255

6


M

A

https://www.pro-stagelighting.com

Channel	Function	Description	
1	Total brightness adjustment	0-255	
2	Strobe	0-255	
3	Group 1 red light	0-255	
4	Group 1 green light	0-255	
5	Group 1 blue light	0-255	
6	Group 1 white light	0-255	
7	Group 1 yellow light	0-255	
8	Group 1 purple light	0-255	
••••••••		•••••	
105	Group 18 red light	0-255	
106	Group 18 green light	0-255	
107	Group 18 blue light	0-255	
108	Group 18 white light	0-255	
109	Group 18 yellow light	0-255	
110	Group 18 purple light	0-255	

6.Dimension

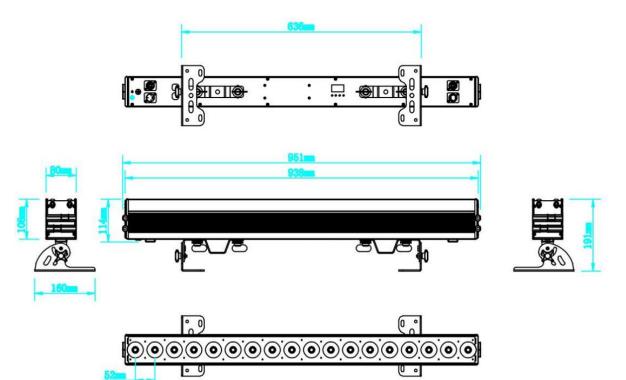

A

7

G

7.Trouble Shooting

Following are a few common problems that may occur during operation. Here are some suggestions for easy troubleshooting:

A. The unit does not work, no light and the fan does not work

- 1. Check the connection of power and main fuse.
- 2. Measure the mains voltage on the main connector.
- 3. Check the power on LED.

B. Not responding to DMX controller

- 1. DMX LED should be on. If not, check DMX connectors, cables to see if link properly.
- 2. If the DMX LED is on and no response to the channel, check the address settings and DMX polarity.
- 3. If you have intermittent DMX signal problems, check the pins on connectors or on

PCB of the unit or the previous one.

- 4. Try to use another DMX controller.
- 5. Check if the DMX cables run near or run alongside to high voltage cables that may cause damage or interference to DMX interface circuit.

C. One of the channels is not working well

- 1. The stepper motor might be damaged or the cable connected to the PCB is broken.
- 2. The motor's drive IC on the PCB might be out of condition

8.Fixture Cleaning

The cleaning of internal and external optical lenses and/or mirrors must be carried out periodically to optimize light output. Cleaning frequency depends on the environment in which the fixture operates: damp, smoky or particularly dirty surrounding can cause greater accumulation of dirt on the unit's optics.

Clean with soft cloth using normal glass cleaning fluid.

Always dry the parts carefully.

Clean the external optics at least every 20 days. Clean the internal optics at least every 30/60 days.

8