

# **300W LED Beam Moving Head**





# **User Manual**



Thank you for choosing our LED 300W moving head light. For your own safety, please read this manual before installing the device. This manual covers the important information on installation and applications. Please install and operate the fixture with following instructions. Meanwhile, please keep this manual well for future needs.

### 1. Safety Tips

To ensure your safety and correct use of lamps. Please read the following safety tips carefully before use to avoid unnecessary failures and injuries.

- 1. Non-professionals, do not disassemble the lamps and their accessories without authorization.
- 2. Rated voltage range: AC110V 120V/250Hz or AC200V 240V /50HZ (must be selected).
- 3. Do not irradiate the light beam on flammable objects, and keep a distance of at least 1M between the lamp and flammable objects.
- 5. Keep the lamps away from liquid substances and humid environments.
- 6. Before using the lamp, make sure that the lamp is well grounded, and do not install or remove any parts of the lamp with power on.
- 7. When installing the lamps, the fixing screws must be fastened, with safety cables, and regular inspections.
- 8. It is recommended that the continuous working time of the lamp should not exceed 20 hours.
- 9. During use, if the lamp is abnormal, stop using the lamp in time.

## 2. Specification

## **Power consumption**

Input Voltage: AC90-260V 50/60Hz

• Power:500W

## Lamp



- Main light use 300W WHITE LED,8000K
- 16 RGBW Cree LEDs for HALO Effect
- 20000 hours lifelong time

#### Optical

Beam angle:3°

• Liner dim: 0-100%

• Strobe: 0-20s

#### Color wheel

• 1 color wheel: 7 wheels+Blank

#### Gobo Wheel

- 1 rotating gobo wheel: 7 changebale gobo wheel+1 blank
- 1fixed gobo wheel: 8 fixed gobo wheel+1 blank

#### **Prism**

 A 16 prism and a honeycomb prism, can be superimposed, variable speed rotation

#### **Frost**

• Independent fog lens, soft light

#### Focus

• Electronic focusing: ultra-smoothly adjust the focus, adjust the sharpness of the pattern

## Scan

• Driven by a three-phase motor, fast, quiet, with automatic error correction and reset

• Pan: 540°

• Tilt: 270°

## **Cooling system**




- Use powerful silent fan
- •Temperature protection function: when the device temperature reaches 40, the fan starts to rotate, when the device reaches 70°


#### Control

- International standard DMX512 signal control connection
- Control channel mode 25/18CH
- Product size: 330(L)\*230(W)\*560(H)mm,
- Product weight: net weight: 15.7kg, gross weight: 20kg

## 3. Photometric data sheet

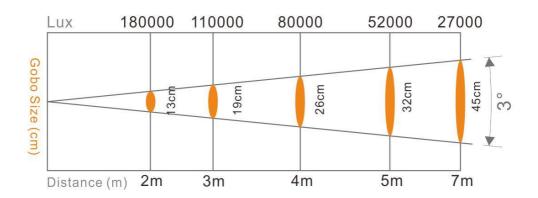


## 4. Menu Display instruction

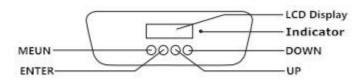



#### Menu

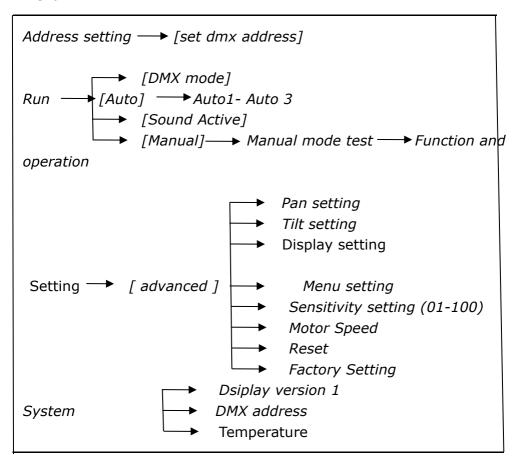

## 5. DMX Chnnel

## 6. 25/18 channels mode

| 25CH | 18CH | Function | DMX<br>Value | Movement details |  |
|------|------|----------|--------------|------------------|--|
| CH1  | CH1  | Pan      | 0-255        | Pan 0-540°       |  |
| CH2  | CH2  | Pan fine | 0-255        | Pan Fine         |  |



|      | <del></del> |                     |         | www.pro otagongriting.or          |  |
|------|-------------|---------------------|---------|-----------------------------------|--|
| СНЗ  | СНЗ         | Tilt                | 0-255   | 0-270°                            |  |
| CH4  | CH4         | Tilt fine           | 0-255   | Tilt Fine                         |  |
| CH5  | CH5         | Pan Tilt<br>Speed   | 0-255   | From fast to slow                 |  |
| CH6  | СН6         | Dimmer              | 0-255   | From dark to bright               |  |
| CH7  | CUZ         | Ctrobo              | 0-7     | Turn on                           |  |
| СП/  | CH7         | Strobe              | 8-250   | Strobe from slow to fast          |  |
|      |             |                     | 0-15    | White                             |  |
|      |             |                     | 16-31   | Color 1                           |  |
|      |             |                     | 32-47   | Color 2                           |  |
|      |             | Color               | 48-63   | Color 3                           |  |
| CLIO | CLIO        |                     | 64-79   | Color 4                           |  |
| CH8  | CH8         |                     | 80-95   | Color 5                           |  |
|      |             |                     | 96-111  | Color 6                           |  |
|      |             |                     | 112-127 | Color 7                           |  |
|      |             |                     | 128-191 | CW from slow to fast              |  |
|      |             |                     | 192-255 | CCW from slow to fast             |  |
|      |             | Color effect        | 0-10    | no                                |  |
| CH9  | СН9         |                     | 11-209  | Color fine                        |  |
|      |             |                     | 210-255 | Color dithering from slow to fast |  |
|      |             | Fixed Gobo<br>wheel | 0-6     | white                             |  |
|      |             |                     | 7-13    | Gobo 1                            |  |
| CH10 |             |                     | 14-20   | Gobo2                             |  |
|      |             |                     | 21-27   | Gobo 3                            |  |
|      |             |                     | 28-34   | Gobo 4                            |  |
|      |             |                     |         |                                   |  |



|      | <del></del> |                      |         | www.pro otagongnang.oc              |
|------|-------------|----------------------|---------|-------------------------------------|
|      |             |                      | 35-41   | Gobo 5                              |
|      |             | 42-48                | Gobo 6  |                                     |
|      |             | 49-55                | Gobo 7  |                                     |
|      |             |                      | 56-63   | Gobo 8                              |
|      | CH10        |                      | 64-70   | Gobo8 Dithering                     |
|      |             |                      | 71-77   | Gobo 7 Dithering                    |
|      |             |                      | 78-84   | Gobo 6 Dithering                    |
|      |             |                      | 85-91   | Gobo5 Dithering                     |
|      |             |                      | 92-98   | Gobo4 Dithering                     |
|      |             |                      | 99-105  | Gobo3 Dithering                     |
|      |             |                      | 106-112 | Gobo 2 Dithering                    |
|      |             |                      | 113-119 | Gobo 1 Dithering                    |
|      |             |                      | 120-127 | white                               |
|      |             |                      | 128-191 | Clockwise, from slow to fast        |
|      |             |                      | 192-255 | Counterclockwise, from slow to fast |
|      |             |                      | 0-15    | white                               |
|      |             | 11 Rotation<br>wheel | 16-31   | Gobo 1                              |
|      |             |                      | 32-47   | Gobo2                               |
| CH11 |             |                      | 48-63   | Gobo 3                              |
|      | CH11        |                      | 64-79   | Gobo 4                              |
|      |             |                      | 80-95   | Gobo 5                              |
|      |             |                      | 96-111  | Gobo 6                              |
|      |             |                      | 112-127 | Gobo 7                              |
|      |             |                      | 128-191 | Clockwise, from slow to fast        |
|      |             |                      |         |                                     |



|       |       |               |         | <u> </u>   |
|-------|-------|---------------|---------|--|
|       |       |               | 192-255 | Counterclockwise, from slow to fast                |
|       |       | Gobo          | 0-15    | Gobo Rotation turn on                              |
|       |       |               | 16-95   | Gobo rotate 0-250                                  |
|       | 01140 |               | 96-135  | Gobo rotate 0-90                                   |
| CH12  | CH12  |               | 136-155 | Gobo rotate 0-250                                  |
|       |       | locacion      | 156-175 | Gobo rotate 0-360                                  |
|       |       |               | 176-215 | Gobo rotate CW from slow to fast                   |
|       |       |               | 216-255 | Gobo rotate CCW from slow to fast                  |
| CH13  | CH13  | Focus         | 0-255   | Gobo hazy to clear                                 |
| CU1 / | CU14  | Driam 1       | 0-63    | No react   |
| СП14  | СП14  | Prism 1       | 64-255  | Prism in   |
| CU15  | CU1 E | Prism 2       | 0-63    | No react   |
| CHI   | CHI   |               | 64-255  | Prism in   |
| CH16  |       | Prism rotate  | 0-15    | Prism in   |
|       |       |               | 16-95   | Prism rotate 0-250                                 |
|       |       |               | 96-135  | Prism rotate 0-90                                  |
|       | CH16  |               | 136-155 | Prism rotate 0-250                                 |
|       |       |               | 156-175 | Prism rotate 0-360                                 |
|       |       |               | 176-215 | Prism self-rotating CW from slow to fast           |
|       |       |               | 216-255 | Prism self-rotating CCW rotating from slow to fast |
|       |       | Frost         | 0-4     | No function  |
| CU17  | CH17  |               | 5-127   | Frost from shallow to deep                         |
| CH17  |       |               | 128-191 | Frost shake  |
|       |       |               | 192-255 | Frost effect                                       |
| CH18  |       | LED<br>Dimmer | 0-255   | From dark to bright                                |
|       |       |               |         |  |



|      |  |            | 0-24    | Turn on  |
|------|--|------------|---------|--|
|      |  |            | 25-64   | from fast to slow                                    |
|      |  |            | 65-69   | Turn on  |
|      |  |            | 70-84   | Fast bright and faded from fast to slow              |
|      |  |            | 85-89   | Turn on  |
|      |  |            | 90-104  | Fast bright and faded from fast to slow              |
|      |  |            | 105-109 | Turn on  |
|      |  |            | 110-124 | Asynchronous strobe from fast to slow                |
|      |  |            | 125-129 | Turn on  |
| CH19 |  | LED Strobe | 130-144 | Asynchronous fast bright and faded from fast to slow |
|      |  |            | 145-149 | Turn on  |
|      |  |            | 150-164 | Fast bright and faded from fast to slow              |
|      |  |            | 165-169 | Turn on  |
|      |  |            | 170-184 | Pulse strobe   |
|      |  |            | 185-189 | Turn on  |
|      |  |            | 190-204 | Asynchronous Pulse                                   |
|      |  |            | 205-209 | Turn on  |
|      |  |            | 210-224 | Fade away  |
|      |  |            | 225-229 | Turn on  |
|      |  |            | 230-244 | Pulse strobe   |
|      |  |            | 245-255 | Turn on  |
| CH20 |  | Head LED   | 0-255   | Dimming from dark to bright                          |
| _    |  |            |         |  |



|      |               | R                              |         |                                  |  |
|------|---------------|--------------------------------|---------|----------------------------------|--|
| CH21 | Head LED<br>G |                                | 0-255   | Dimming from dark to bright      |  |
| CH22 |               | Head LED<br>B                  | 0-255   | Dimming from dark to bright      |  |
| CH23 |               | Head LED<br>W                  | 0-255   | Dimming from dark to bright      |  |
|      |               |                                | 0-10    | No function                      |  |
|      |               |                                | 11-20   | color 1                          |  |
|      |               |                                | 21-30   | color 2                          |  |
|      |               |                                | 31-40   | color 3                          |  |
|      |               | LED color<br>changing<br>faded | 41-50   | color 4                          |  |
|      |               |                                | 51-60   | color 5                          |  |
|      |               |                                | 61-70   | color 6                          |  |
|      |               |                                | 71-80   | color 7                          |  |
|      |               |                                | 81-90   | color 8                          |  |
| CH24 |               |                                | 91-100  | color 9                          |  |
|      |               |                                | 101-110 | color 10                         |  |
|      |               |                                | 111-120 | color 11                         |  |
|      |               |                                | 121-130 | color 12                         |  |
|      |               |                                | 131-140 | color 13                         |  |
|      |               |                                | 141-150 | color 14                         |  |
|      |               |                                | 151-160 | color 15                         |  |
|      |               |                                | 161-170 | color 16                         |  |
|      |               |                                | 171-180 | Full color                       |  |
|      |               |                                | 181-255 | Color gradient from slow to fast |  |



|        |      |             | pro stagengrange |               |  |
|--------|------|-------------|------------------|---------------|--|
| CH25 C |      | 18 Auto Run | 0-7              | No react      |  |
|        |      |             | 8-131            | Auto mode     |  |
|        | CH18 |             | 132-249          | Sound control |  |
|        |      |             | 250-253          | Reset         |  |
|        |      |             | 254-255          | No react      |  |

## 6. After sale service

Our company has long provided customers with responsible technical advice

If the product fails and needs to be repaired, please show the product warranty card and fill in the relevant content truthfully. At the same time, we also hope that the customer will promptly feedback the product problems to us, so that we can improve the product in the first time.

In addition to lamps, the following accessories can also be selected: Accessories: Options: customer requirements

| <b>*</b> | Warranty card |              |
|----------|---------------|--------------|
| Custom   | ner           | Selling Shop |
| Compa    | ny:           | Consign:     |
| Add:     |               | Tel:         |
| Mob:     |               |              |

Note: The above blanks must be filled in and stamped truthfully by the end user and the point of sale, otherwise the warranty will not be granted. (Please see below for the warranty period and terms)

Warranty: 1 year since the date bought. (3) Failure or damage caused by force majeure;

Warranty terms: 1. Use this product under normal conditions during the warranty period (4) Failure or damage caused during transportation and unloading;

In the event of failure, you can present this (5) failure or damage caused by failure to follow the instructions for use based on the contents of this warranty clause;

Warranty card and purchase bill (copy), disassemble the product in the designated service center or (6) without the authorization of the manufacturer or non-professionals;



Manufacturers enjoy free maintenance services. (7) Due to the use of a control system that is not approved by the factory or not supported by the factory

- 2. During the repair period, paid repair services will be implemented in the following situations. Caused by the failure.
- (1) A valid warranty card cannot be issued; (8) Consumables (light bulbs).
- (2) Omissions, alterations, and no sales shop name on the warranty card;

Note: Based on our company's continuous product improvement, the data contained in this manual may change, and there will be no further notice of changes at that time. The company reserves the right to change the relevant specifications when the product is improved. sorry for the inconveniences caused.